^	$\int a $	LIGHT SOURCE REMOVING INSTRUCTION	Creation date (dd/mm/yyyy): 29/09/2022	
	A QU	ALITY	Last update date (dd/mm/yyyy): 29/09/2022	
1	ation	Supplier's name or trade mark	ADEO Services	
2	ıeral informa	Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS0001, 59790 RONCHIN	
3		Model Identifier - Luminaire Supplier reference	7520R	
4	Ger	Light sources maker model	TL7520R	

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explaination of the step	Pictures	Tools
Step 1	Unscrew the wiring middle sleeve on the back of the lamp body by hand. Set the wiring middle sleeve aside		By hand
Step 2	Loosen the six screws on the back of the lamp body with a screwdriver Take out the reflector of the lamp cover		screwdriver
Step 3	Loosen the LN terminal screw with a screwdriver and pull out the LN electronic wire 2. Loosen the ground wire screw with a screwdriver		screwdriver
Step 4	Use a screwdriver to loosen the lock light board screws Take out the light board		screwdriver
Step 5			
Step 6			
Step 7			

Step 8		
Step 9		
Step 10		