




Maxima Evo II Cargo Maxi 400/6

Instrukcja montażu w szafce C40/200







1

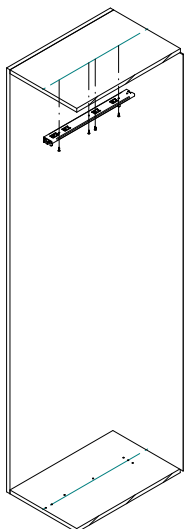


2

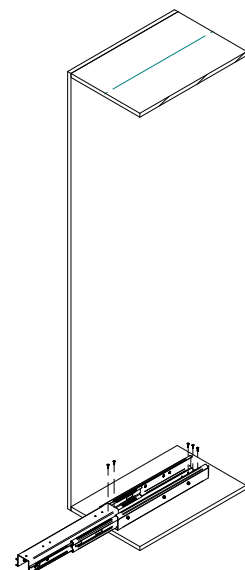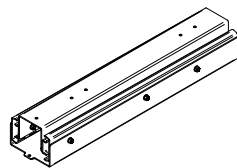



3

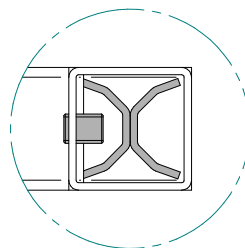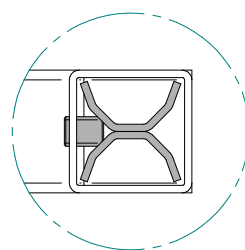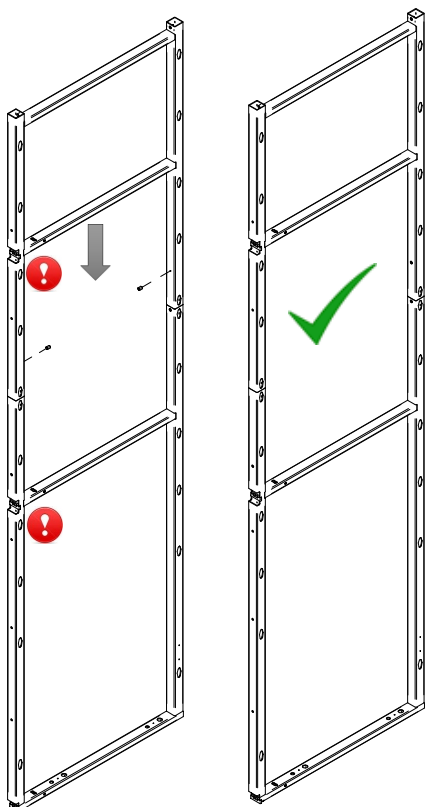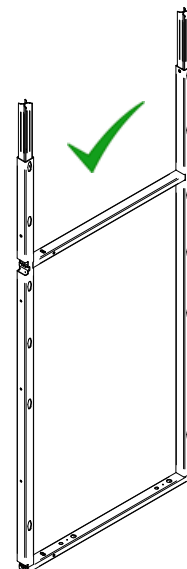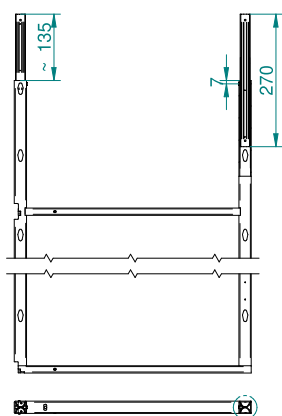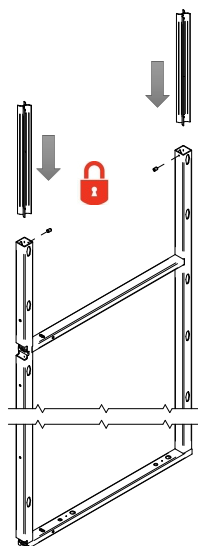

4

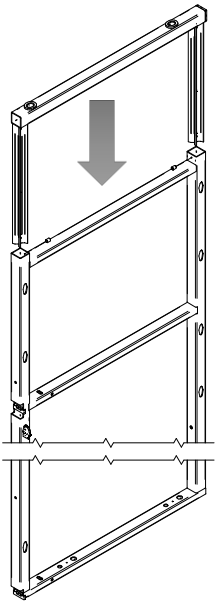


5

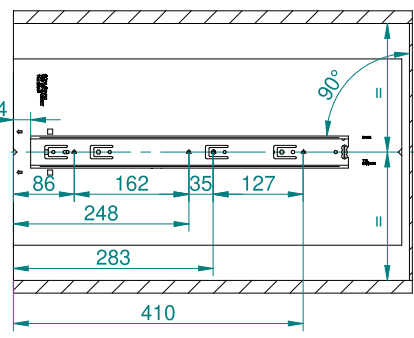
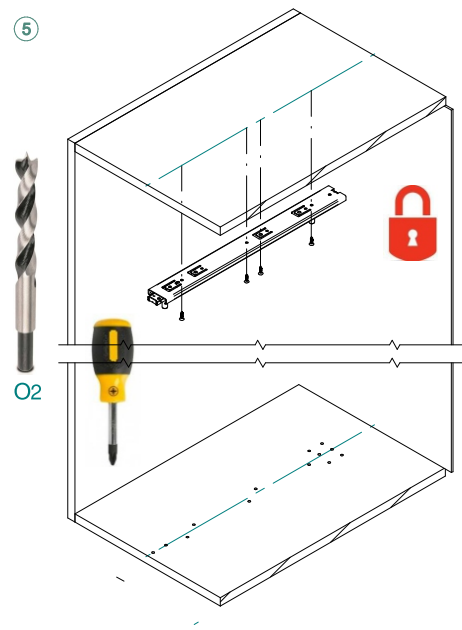


O2



6

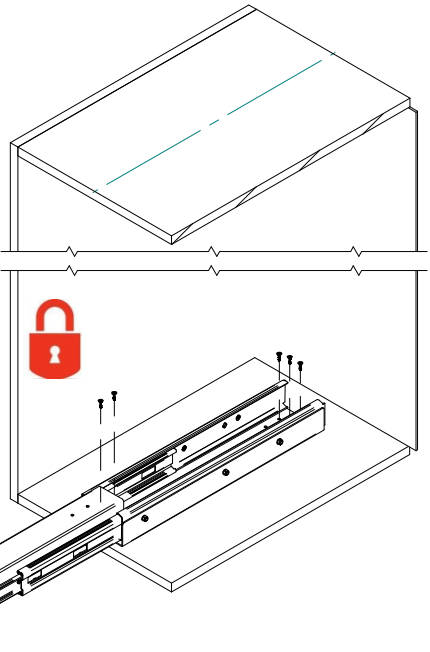




O2

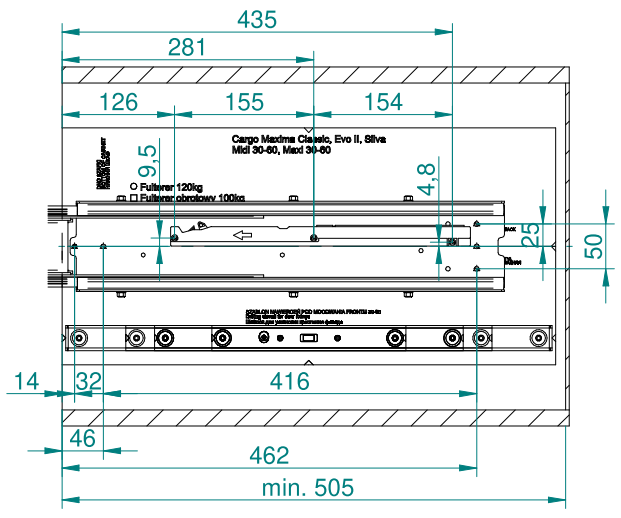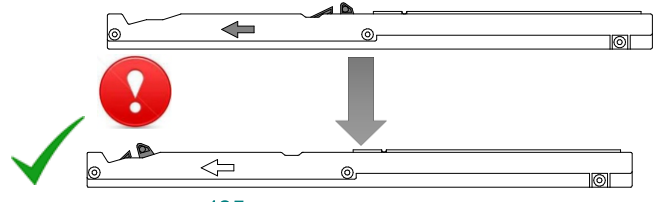




7

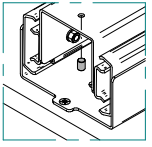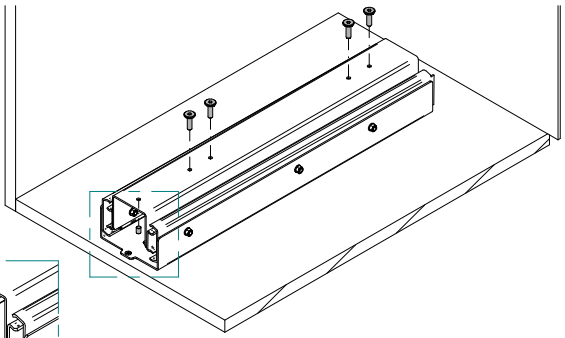







~ 10

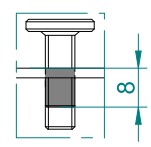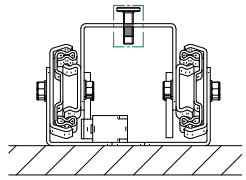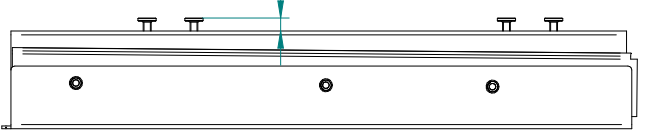


8

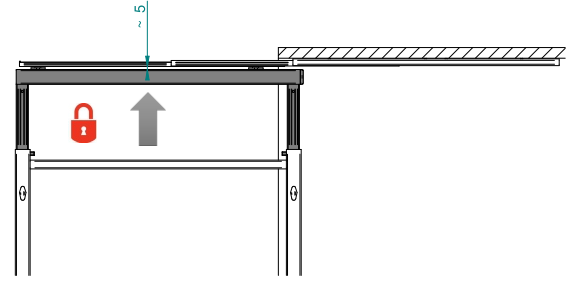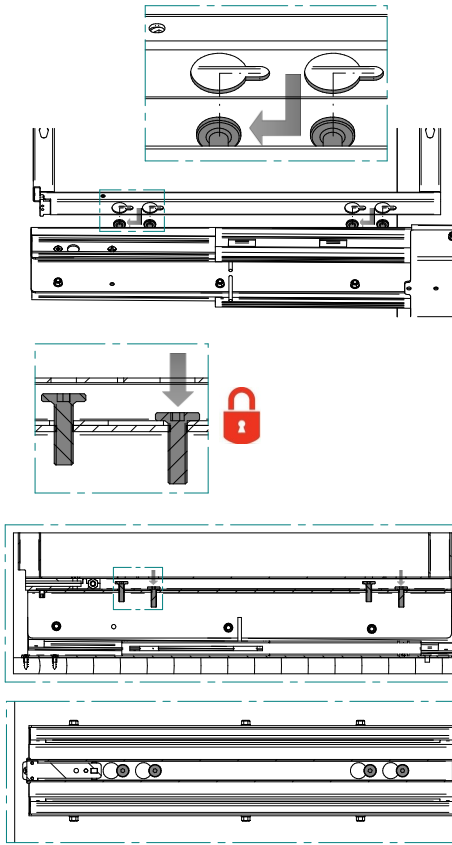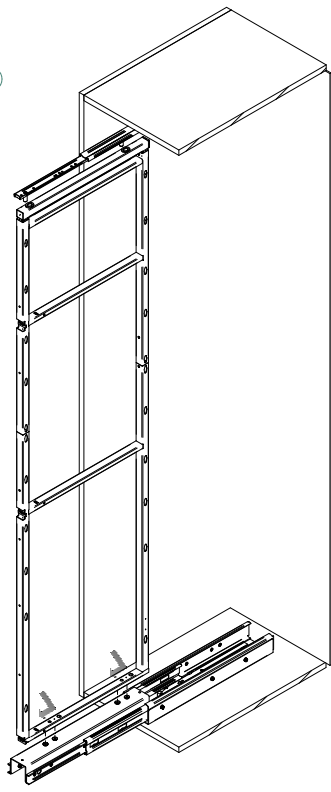


9

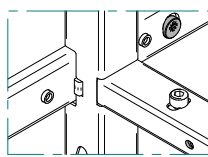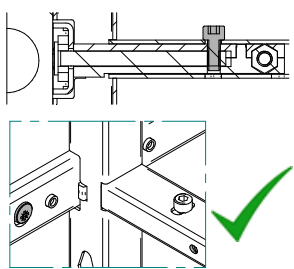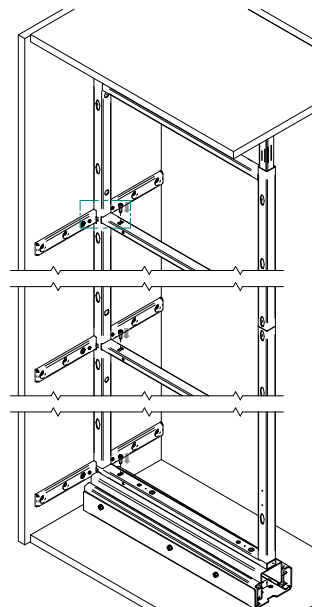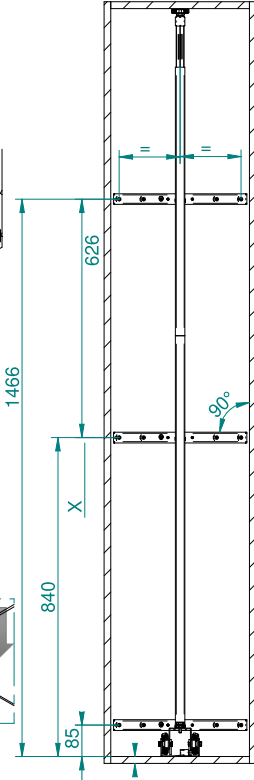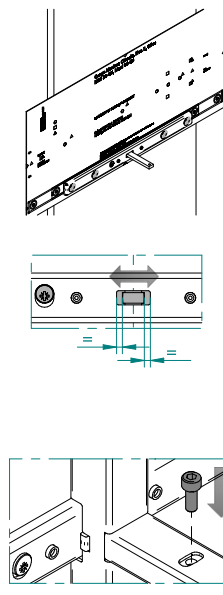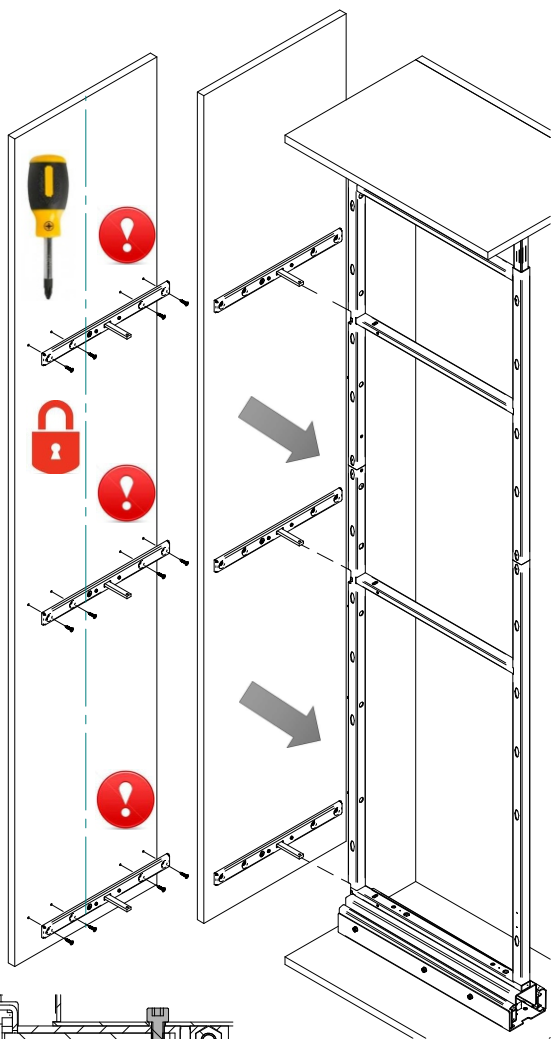


10

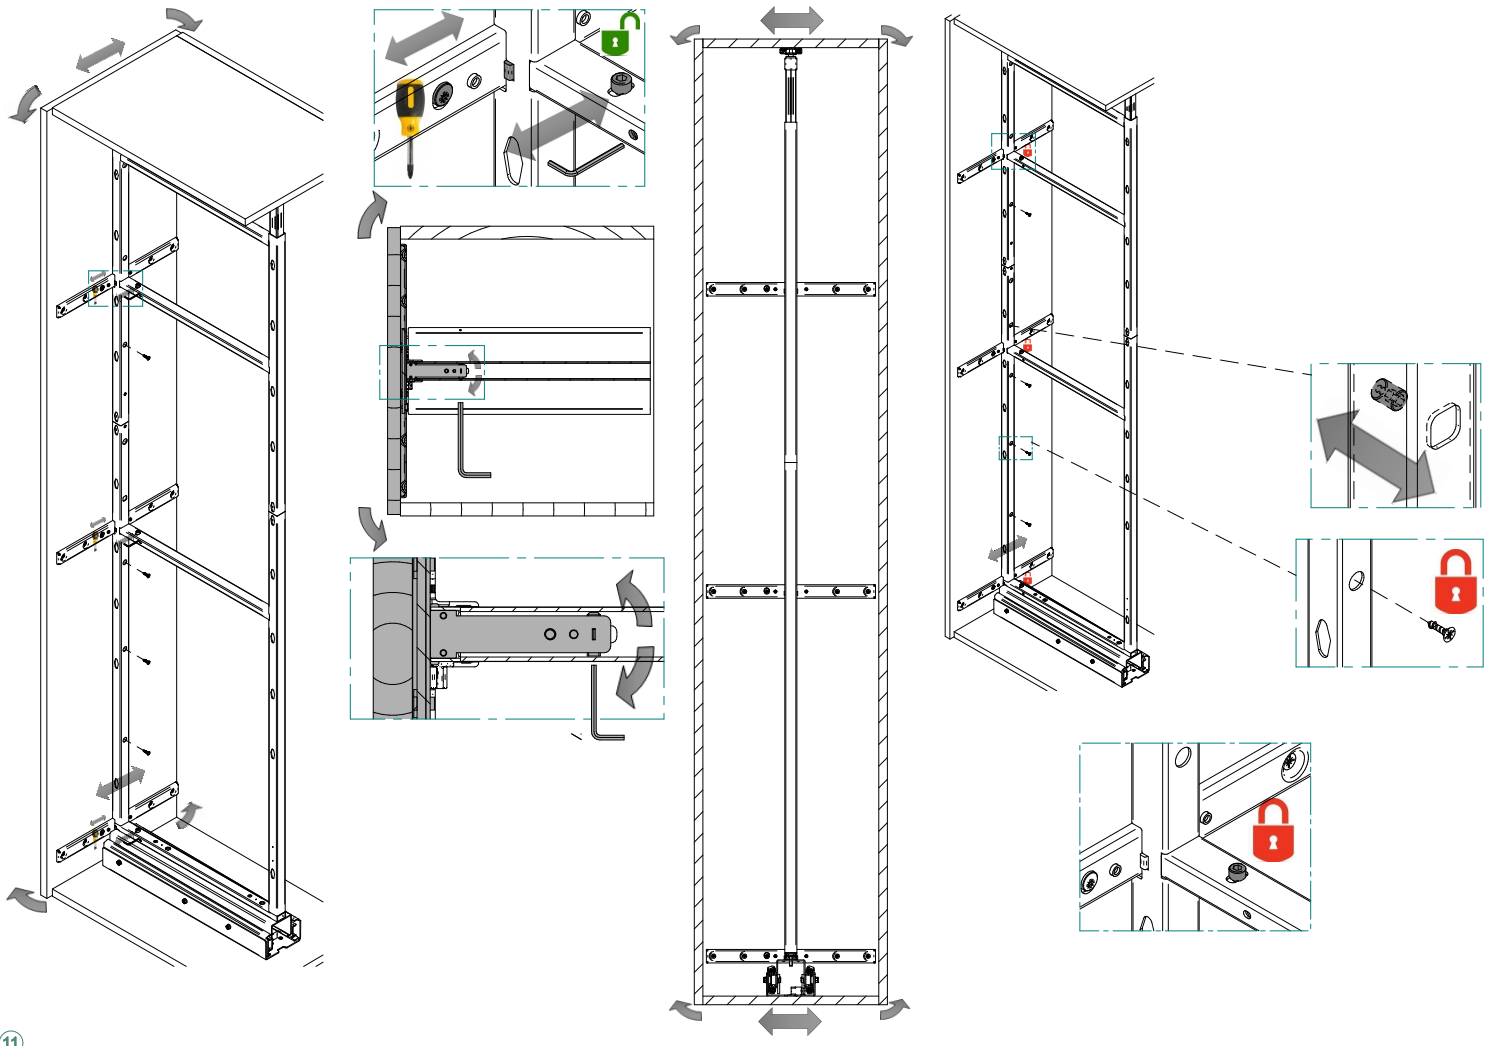




11

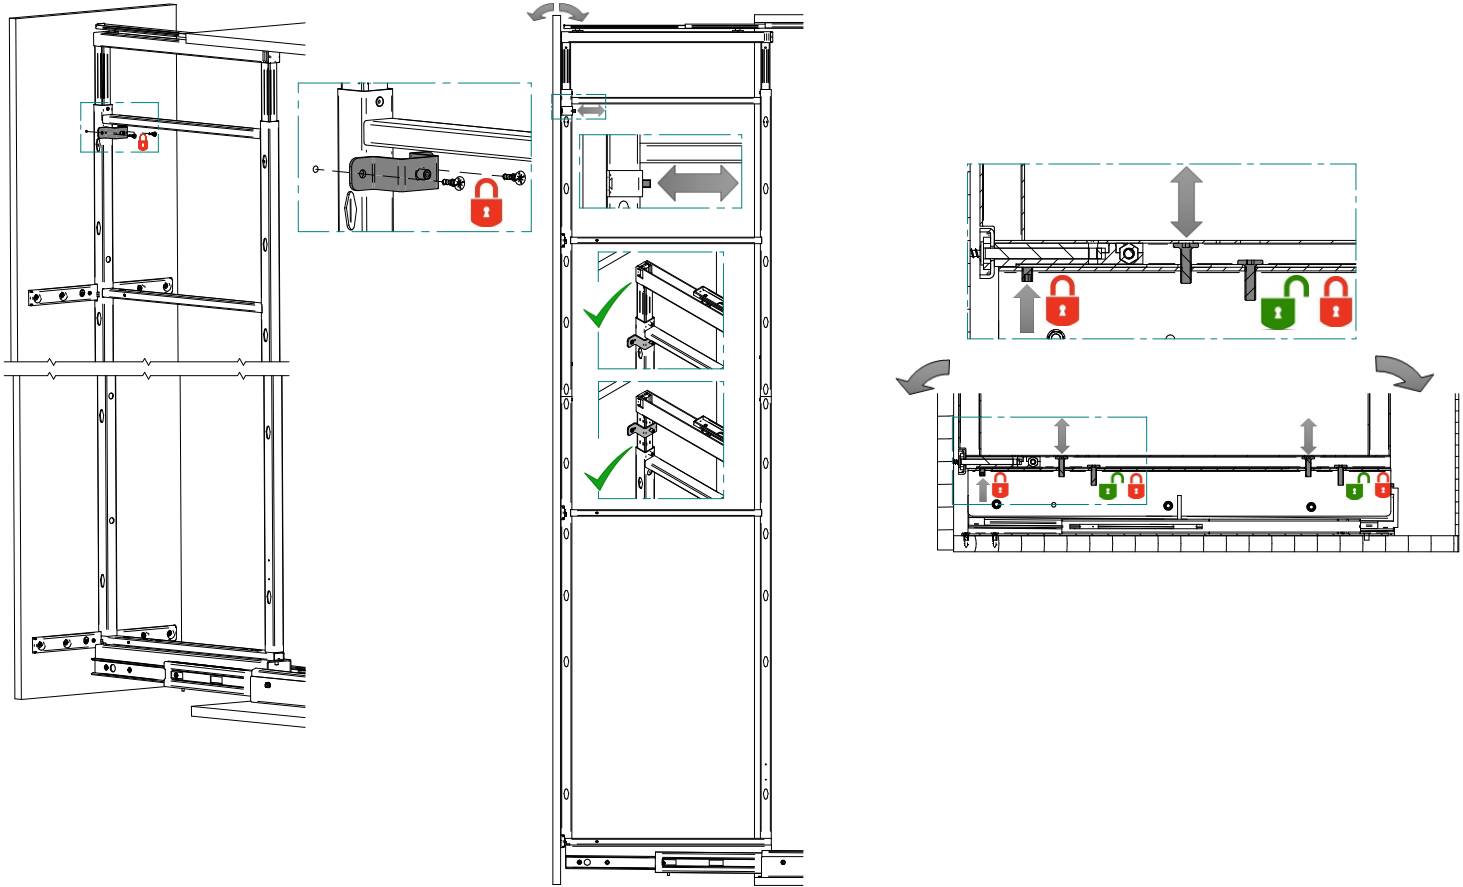

10

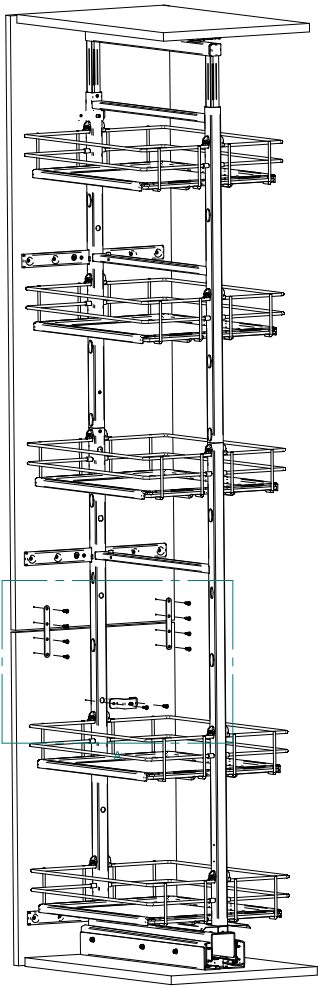

11

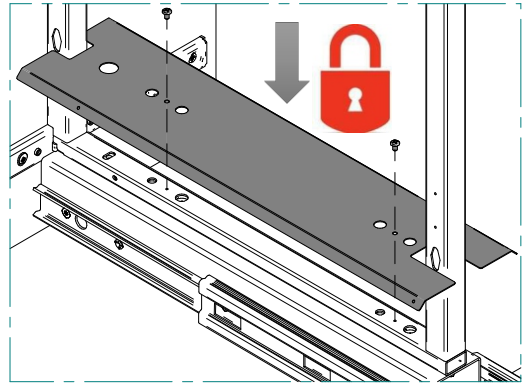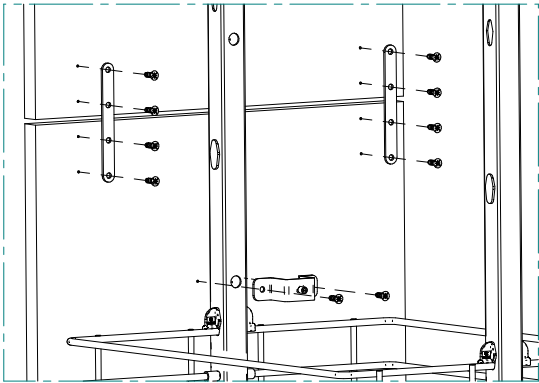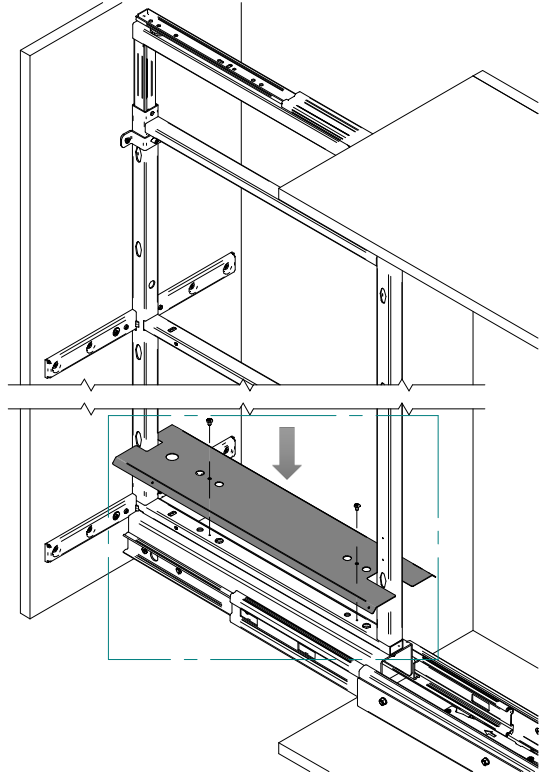

11

